

[Issue Descriptions]: The position of the screen is not in the center.

- Adjust the H-position, and V-position, or Perform the Auto adjustment.