

## **[Issue Descriptions]: The screen is not synchronized**

- Check if the signal cable is firmly seated in the socket.
- Check if the output level matches the input level of your computer.
- Make sure the signal timings of the computer system are within the specification of the monitor.
- If your computer was working with a CRT monitor, you should check the current signal timing and turn off your computer before you connect the VGA Cable to this monitor.