

## **[Issue Descriptions]: Barcode\_Barcode Scanner has laser but cannot read bar codes**

- Adjust the distance between barcode scanner of the device and the barcode being scanned.
- Make sure the barcode code type is enabled in the tablet. To enable/disable a specific barcode code type, go through the “Barcode Scanner Configuration” section.