## [Issue Descriptions]: The picture does not appear

- Check if the signal cable is firmly seated in the socket.
- Check if the Power is ON at the computer
- Check if the brightness control is at the appropriate position, not at the minimum